



ALERT WORKFLOW

1 Alarm State



CONTINUOUS MONITORING

Sensor sends "out of range" reading state to OneVue

Monitored Asset enters warning state

Remains in warning state for longer than alarm delay, or device sends "operational alert" reading to OneVue


Monitored Asset enters alarm state

2 Staff Notified



ALERT ACTIVATED

Alert notifications sent to staff
Alert Resolution created

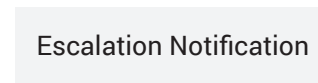

4 Alert Ends

RETURNS TO NORMAL STATE

 
"Return to Normal" notification sent to staff

All event history stored


Staff reviews Event History

Monitoring > Monitored Assets > Monitored Asset Profile

Reports > Active

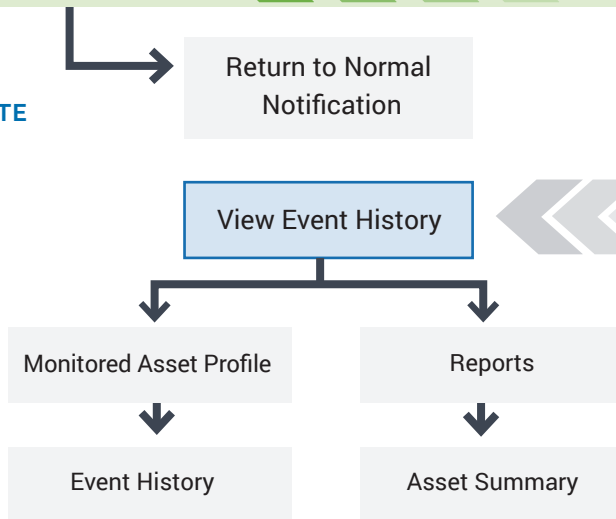

3 Staff Takes Action

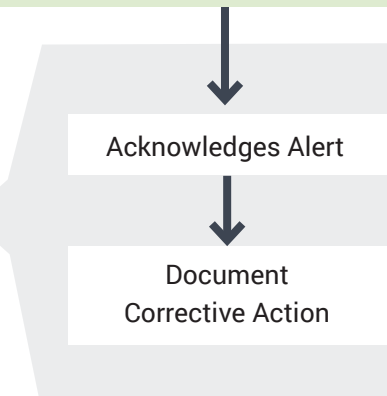 

RESOLVE ALERT CONDITION

Staff acknowledges alert to indicate taking action

Dashboard To-Do List

Staff documents corrective actions taken to resolve alerting condition

Monitoring > Alert Resolutions

Primex delivers platforms that utilize a facility's existing network infrastructure to automate, monitor, document, and report essential activities performed by the facility management staff including time synchronization and environmental, temperature, and event monitoring.

www.primexinc.com

Call 855-557-0337 for more information, to request a trial, or to schedule an on-site consult.