


# OneVue Sense Temperature Probe with CertiTrak™

Simply the easiest way to maintain the accuracy of the calibrated probes in all your temperature monitoring environments.

Documentation of probe calibration to NIST standards, as well as probe replacement policies and procedures, is required by the CDC and other authorities having jurisdiction (AHJs). Our **Temperature Probe with CertiTrak Calibration Certification Tracking** eliminates the need to manually track calibration data and probe life of your temperature monitoring probes.

Each probe activates CertiTrak when the probe is initially inserted into a OneVue Sense Temperature Sensor and put into service.

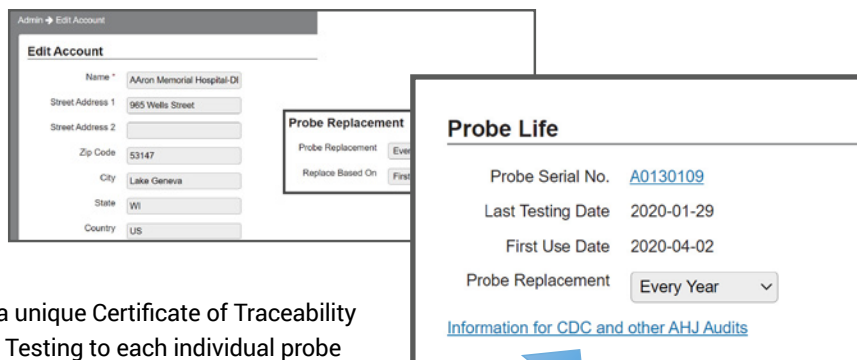

>> CertiTrak links a unique Certificate of Traceability and Calibration Testing to each individual probe within OneVue Monitor software. The certificate provides all the data required for compliance to guidelines issued by the CDC and other authorities having jurisdiction.

>> A record of the last calibration testing date for the individual probe, the date it was put into service and the days until the next calibration testing is due (or probe replacement) are all linked to the probe record in OneVue Monitor.



PART NO.	DESCRIPTION
T100SMRT	PrimexPROBE with CertiTrak, NIST-Traceable
T100CSMRT	PrimexPROBE Cryo with CertiTrak, NIST-Traceable
SMRTGRP-C	Solid Wax Based Thermobuffer (assembled with T100SMRT probe)
SMRTGRP-G	Glycol Thermobuffer (assembled with T100SMRT probe)

**PrimexPROBE WITH CERTITRAK**

- **Temperature Range:** -40 °F to 221 °F (-40 °C to 105 °C)
- **Accuracy:** ± 1.0 °F (0.5 °C)
- **Sheath Material:** Stainless steel
- **Sheath Diameter:** 1/4" (0.63cm)
- **Cable Properties:** Ribbon
- **Cable Length:** 6' (1.8m)

**PrimexPROBE CRYOGENIC WITH CERTITRAK**

- **Temperature Range:** -328 °F to 302 °F (-200 °C to 150 °C)
- **Accuracy:** ± 1.0 °F (0.5 °C)
- **Sheath Material:** Stainless steel
- **Sheath Diameter:** 1/4" (0.63cm)
- **Cable Properties:** Nylon
- **Cable Length:** 6' (1.8m)

>> The unique Certificate of Traceability and Calibration Testing (Calibration Data Report) is available with just one click on the probe serial number.

**Probe Life**

Probe Serial No. [A0130109](#)

Last Testing Date 2020-01-29

First Use Date 2020-04-02

Probe Replacement Every Year

[Information for CDC and other AHJ Audits](#)

**Temperature NIST Certification**

<b>Customer:</b> Primex Wireless, Inc.	<b>Serial Number:</b> A0127876
<b>Manufacturer:</b> Automation Components Inc.	<b>Certification Date:</b> 01/09/2020
<b>Part Number:</b> Q13514-1	
<b>Sales Order:</b> 259421	<b>Test Procedure:</b> T0000967
<b>Shop Order:</b> 25942102	

Certification is valid for 2 years after the date of first use recorded in OneVue or 5 years after the certification date if the probe is not plugged into a sensor, whichever is sooner.

**Test Information**

**Certification Equipment**

Manufacturer	Model	Serial Number	Last Cal Date	Cal Due Date
Isotech	1498J	1498J-29	07/12/2019	07/12/2020
Isotech	TTI-10	34316-3	07/12/2019	07/12/2020
Keysight Technologies	34970A	MY44064746	09/04/2019	09/03/2020

**Unit Under Test Temperature Data**

Reference Temp	Calculated Temp	Actual Resistance	Measurement Delta	Uncertainty	Pass/Fail
-19.07 °C	-19.29 °C	65502.11 Ohm	-0.22 °C	±0.19 °C	PASS
39.09 °C	39.08 °C	6013.40 Ohm	-0.01 °C	±0.19 °C	PASS

Admin → Edit Account

**Edit Account**

Name \*

Street Address 1

Street Address 2

Zip Code

City

State

Country

>> A Probe Replacement Status Report makes it easy to plan when to change out a probe, allowing you to manage inventory and replacement costs more effectively.

**Probe Replacement**

Probe Replacement Every 2 Years

Replace Based On First Use Date

**\*\*Probe Replacement**

Page 1

Signature: \_\_\_\_\_

Run Date: 2020-08-15 08:12:14 AM

Account: **Aaron Memorial Hospital-DEMO**

2020-07-15 - 2020-08-14

Probe Serial Number	Asset Name	Sensor Name	Business Unit	Gateway ID	First Use Date	Last Testing Date	Probe Replacement	Days to Replacement
A0017574	Pharmacy Med Fridge #2 (TR)	Temperature-73:DE-1	Pharmacy	00:1E:B3:8F:73:D E	2018-04-30 08:22:50 PM	2017-08-29	Every 2 Years	-106
A0017493	Demo Alert Usage	Temperature-DF:E3-1	Demo Alerts	00:1E:B3:8F:73:8 3	2018-04-30 08:22:50 PM	2017-08-29	Every 2 Years	-106
A0017598	Pharmacy Spare Fridge (TR)	Temperature-A7:83-1	Pharmacy	00:1E:B3:8F:A7:8 3	2018-06-07 09:35:26 PM	2017-08-29	Every 2 Years	-68

To Learn More:  
 Call - 855-602-2934  
 Email - info@primexinc.com  
 primexinc.com

